



Changing the Code!

1) Solve the Cryptex with the original code when you purchased from us!

2) Pull the cryptex right hand side out (as if you were checking to see what was inside!)

3) Unscrew the Right hand side retaining piece (Pictures 1+2)

4) You should then be able to slide/wiggle the circular puzzle pieces along and off the end of the Cryptex! (you may need to give a very slightly wiggle/rocking motion to get these off - you can spin the piece around until it moves off the inner springs which will be gripping it) (Picture 3+4)

5) Change the password as you see fit (Pictures 5+6) by pulling out and rotating the inner circle underneath the letter ring - note there is a gap in the inner ring (Picture 5) and this gap must be placed underneath the letter you want to select!

6) Note the orientation of the very inner rings (Picture 6) as they won't go back on the other way, they need the dipped edge to be facing left

7) Reverse all that and put together again! you may use sealant on the screw end if you wish to make this extra secure (although it will be harder to remove and change code next time!)